PARTS LIST

for

Whirlpool

30″ ELECTRIC SET-IN SELF-CLEAN OVEN

MODEL

RS6700XKW-0

▲W—White, D—New Avocado, C—Coffee,
G—Harvest Gold, N—Almond

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

Whirlpool CORPORATION
Benton Harbor, Michigan.

11-81 Litho in U.S.A.

Part No. 980597

177-G-1

OVEN PARTS

For Model: RS6700XKW-0

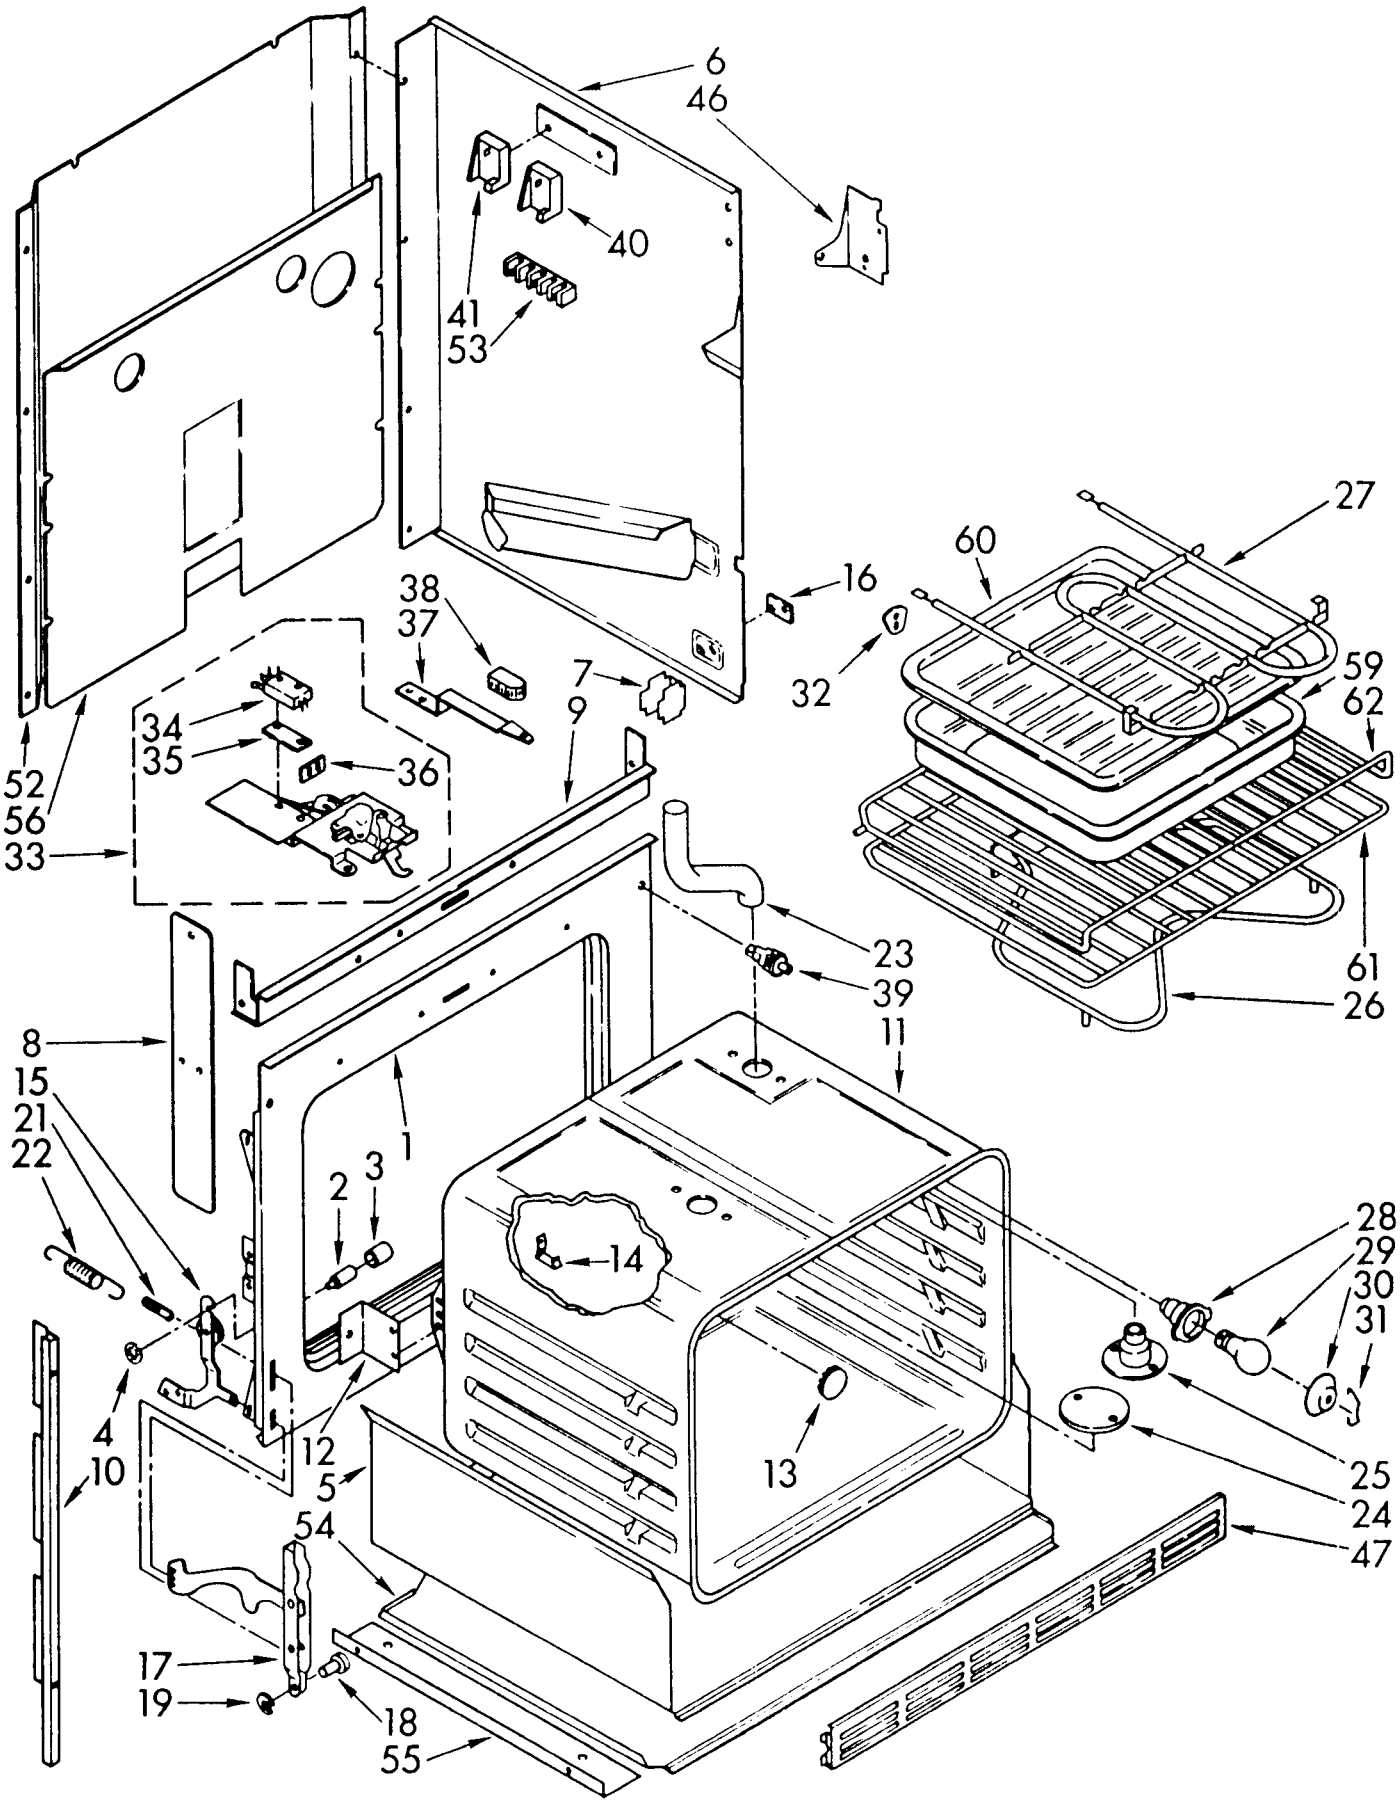

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Note:The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	328747	Front Frame
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	310770	Insulation Tray
6	311006	Side Wrapper R.H.
	311009	Side Wrapper L.H.
	253549	Screw, 10A x 1/2 (14)
	343631	Screw, 10-32 Hex (Ground)
7	311774	Support, Side Wrapper (4)
	253549	Screw, 10A x 1/2 (4)
8	311256	Insulation Baffle (2)
	308536	Screw, 6A x 1-1/4 (2)
9	310693	Baffle, Top Insulation
	253549	Screw, 10A x 1/2 (2)
10	310685	Side Trim L.H.
	310689	Side Trim R.H.
	253549	Screw, 10A x 1/2 (6)
11	328756	Oven (30" Pyro)
	311056	Screw (3)
12	310713	Bracket, Oven Mounting (2)
	246127	Screw, 10-32 x 5/8 (6)
13	257314	Plug Button
14	258139	Clip, Therm Bulb (2)
15	328801	Hinge Ear R.H.
	328802	Hinge Ear L.H.
16	310659	Plate (Side Panel) (2)
	308544	Screw, 10-24 x 1/2 (4)
17	328803	Channel Arm (2)
18	307986	Pin, Hinge (2)
19	307594	Ring, Retainer (2)
21	308125	Anchor, Spring (2)
22	308126	Spring, Oven Door (2)
23	310835	Tube, Vent Extension
24	310839	Smoke Eliminator
	90767	Screw, 8A x 3/8
	253549	Screw, 10A x 1/2 (2)
25	310662	Plate, Cover
	253549	Screw, 10A x 1/2 (2)
26	308180	Unit, Bake
	246127	Screw, 10-32 x 5/8 (2)
27		Unit, Broil
	311714	Alternate
	311713	Alternate (Includes Illus. 32)
	246127	Screw, 10-32 x 5/8 (4)
28		Socket, Oven Light
	307856	Alternate
	310208	Alternate
	308043	Screw, 10-12 x 7/8 (2)
29	311255	Bulb, Oven Light
30	308039	Cover, Oven Light
31	308038	Retainer, Oven Light
32	311982	Coverplate
33	328585	Latch Assembly

	253549	Screw, 10A x 1/2 (2)
	311056	Screw (2)
34	308185	Safety Switch
	98106	Screw (2)
35	309245	Insulator, Switch
36	310100	Terminal, Shield
37	310825	Latch Handle
	308422	Screw, 10-24 x 1/2 (2)
38	311253	Knob, Latch Handle
	246135	Screw, 8 x 5/16
39	310345	Switch, Door
40	310643	Switch, Percentage Broil
41	311585	Switch, Percentage Bake
46		Cover Side
	310714	L.H.
	310715	R.H.
	253549	Screw, 10A x 1/2 (6)
47	310668	Bottom Grill
	309029	Screw, 8-15 x 1/2 (3)
52	310459	Back Panel
	253549	Screw, 10A x 1/2 (6)
53	258076	Terminal Block
	112432	Nut (3)
	98445	Screw, 10-16 x 3/4 (2)
54	310458	Cover, Bottom & Top (2)
55	311592	Angle, Support (2)
	253549	Screw, 10A x 1/2 (4)
56	311012	Cover, Rear
	253549	Screw, 10A x 1/2 (12)
59	310973	Pan, Broiler
60	308674	Grid, Broiler Pan
61	308173	Rack, Oven
62	308172	Rack, Oven Offset

CONTROL PANEL PARTS

For Model: RS6700XKW-0

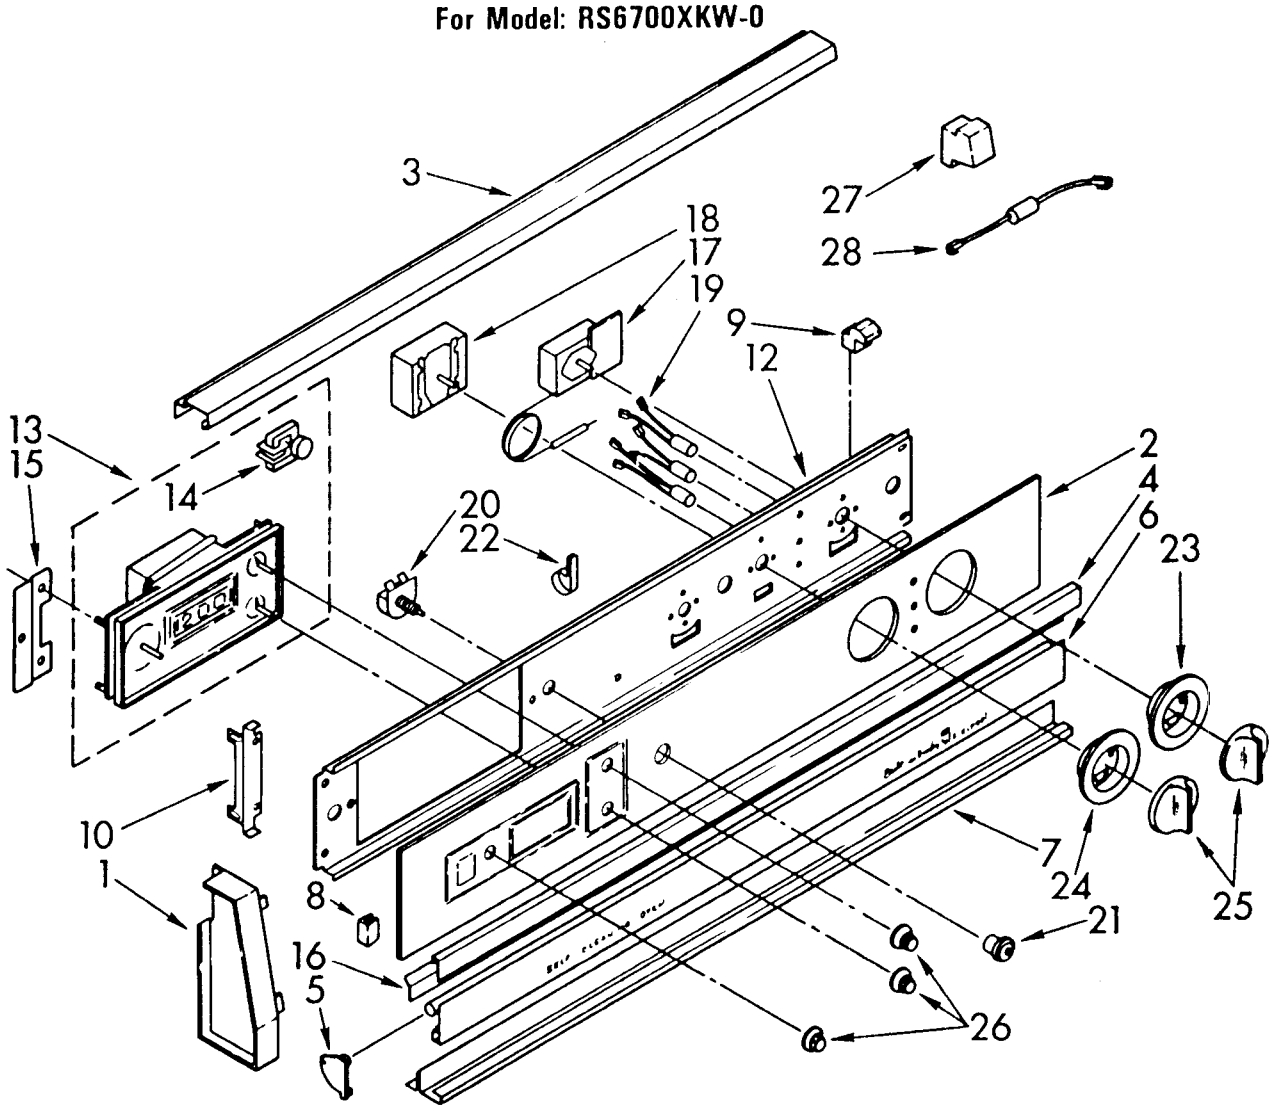

Note:The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	310826	End Cap. L.H.
	310827	End Cap R.H.
	342043	Screw (2)
	308504	Screw (2)
2	310822	Control Panel, Glass
3	310819	Rail, Top
4	311189	Trim, Center
5	310833	End Trim, Vent Door R.H.
	310832	End Trim, Vent Door L.H.
6	311191	Door, Vent
7	311190	Trim, Bottom
	342043	Screw (6)
8	310842	Channel, Rubber (2)
9	310823	Retainer, Glass (4)
10	310720	Bracket, Control Panel (2)
	98520	Screw
12	310727	Bracket, Control
13	310325	Timer, Digital (Included #14)
	308846	Palnut, Timer 10-32
	246132	Screw, 8A x 3/8 (2)
14	308594	Motor, Timer
15	310721	Bracket, Timer (2)
16	255893	Seal
17	310017	Thermostat, Oven
	487384	Screw, 6-32 x 1/4 (2)
18	310006	Selector Switch
	155023	Screw, 8-32 x 1/4 (2)
19	311802	Light Indicator Oven, Lock & Clean (3)
20	308829	Switch, Oven Light
	255912	Nut, Hex 3/8
	246132	Screw, 8A x 3/8 (4)
21	308784	Bezel Switch
22	308605	Strain Relief
	246132	Screw, 8A x 3/8
	308609	Strain Relief
	166681	Screw, 10-32 x 5/16
23	311066	Escutcheon, Thermostat
24	311068	Escutcheon, Selector Switch
	254225	Screw, 8BT x 1/4 (2)
25	310834	Knob, Control (2)
26	309553	Knob, Timer (3)
27	311450	Trim Support
28	328891	Resistor & Terminal Assembly
	98655	Terminal

COOKTOP PARTS

For Model: RS6700XKW-0

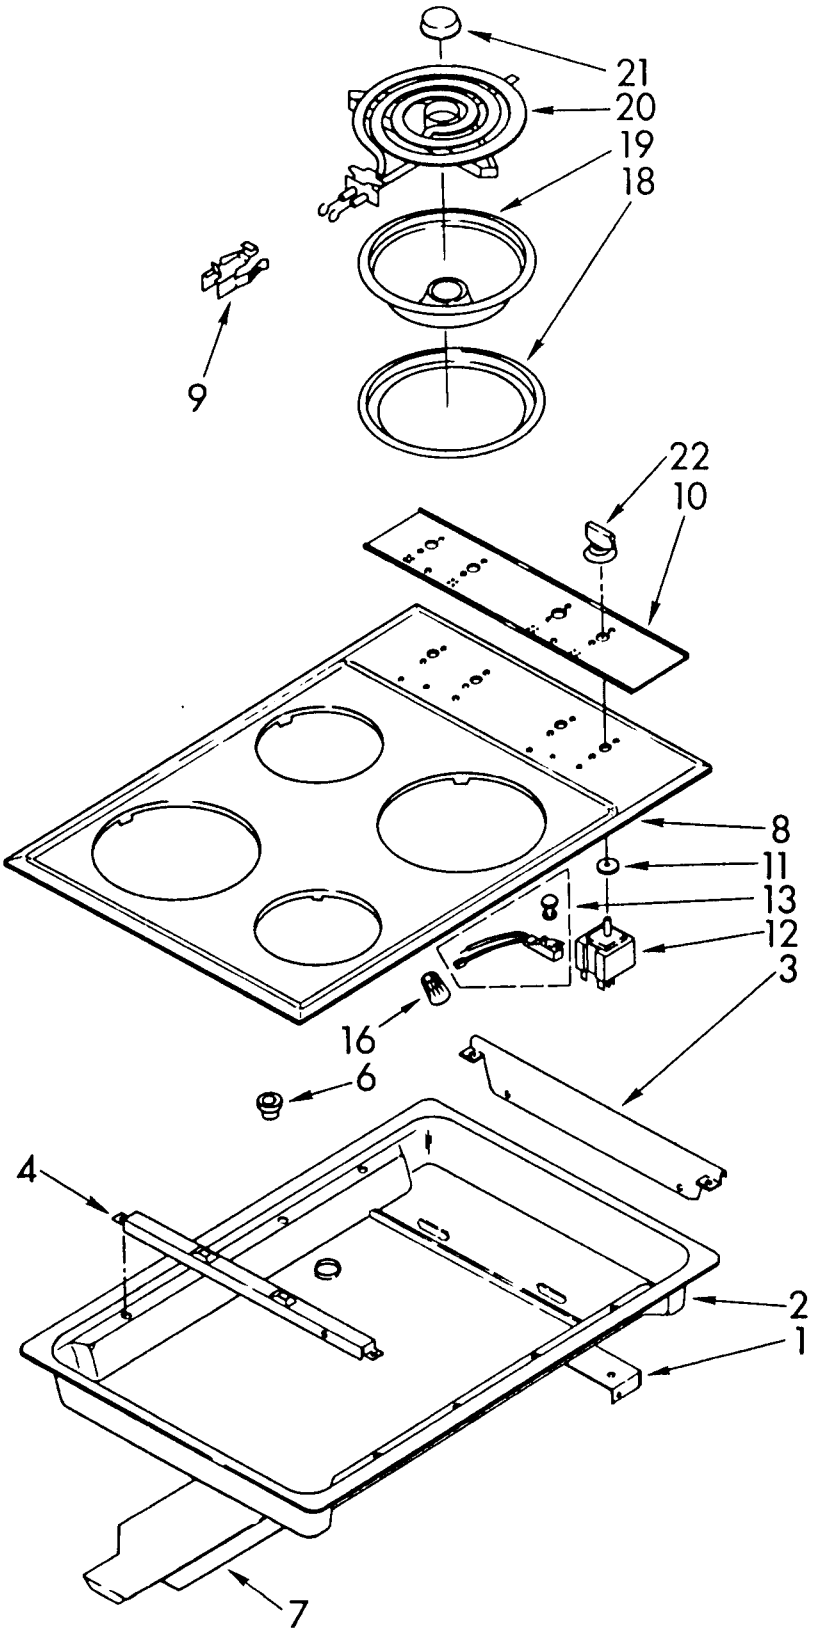

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Note:The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	310718	Support, Burner Box (2)
	253549	Screw, 10A x 1/2 (6)
2	311015	Burner Box
3	310716	Shield, Switch
	342043	Screw (2)
4	310717	Support, Cooktop
	342043	Screw (2)
	253549	Screw, 10A x 1/2 (4)
6	258109	Bushing
7	310627	Cover, Top Rear
	253549	Screw, 10A x 1/2 (3)
8		Cooktop
	307493	White
	308943	New Avocado
	308944	Harvest Gold
	308945	Coffee
	308946	Almond
	166681	Screw, 10-32 x 5/16 (1)
	253549	Screw, 10-32 x 5/16 (2)
9	258858	Clip, Receptacle (4)
	311932	Screw, 6-32 x 1/4 (4)
10	310837	Panel, Control
11	309839	Seal, Switch
12		Switch, Infinite
	311837	Use W/6" Surface Unit (2)
	311836	Use W/8" Surface Unit (2)
	246406	Screw, 8-32 x 5/16 (8)
13	311523	Indicator Light (2) (Includes Lens)
16	255673	Wire Connector
18		Adapter Ring
	306785	6" (2)
	306786	8" (2)
19		Reflector Pan
	306789	6" (2)
	306790	8" (2)
20		Unit, Surface
	309250	6" Alternate
	309334	6" Alternate
	309214	8" Alternate
	309340	8" Alternate (Includes Illus. 21)
21	309195	Medallion, Surface Unit
22	329404	Knob, Control (4)

OVEN DOOR PARTS

For Model: RS6700XKW-0

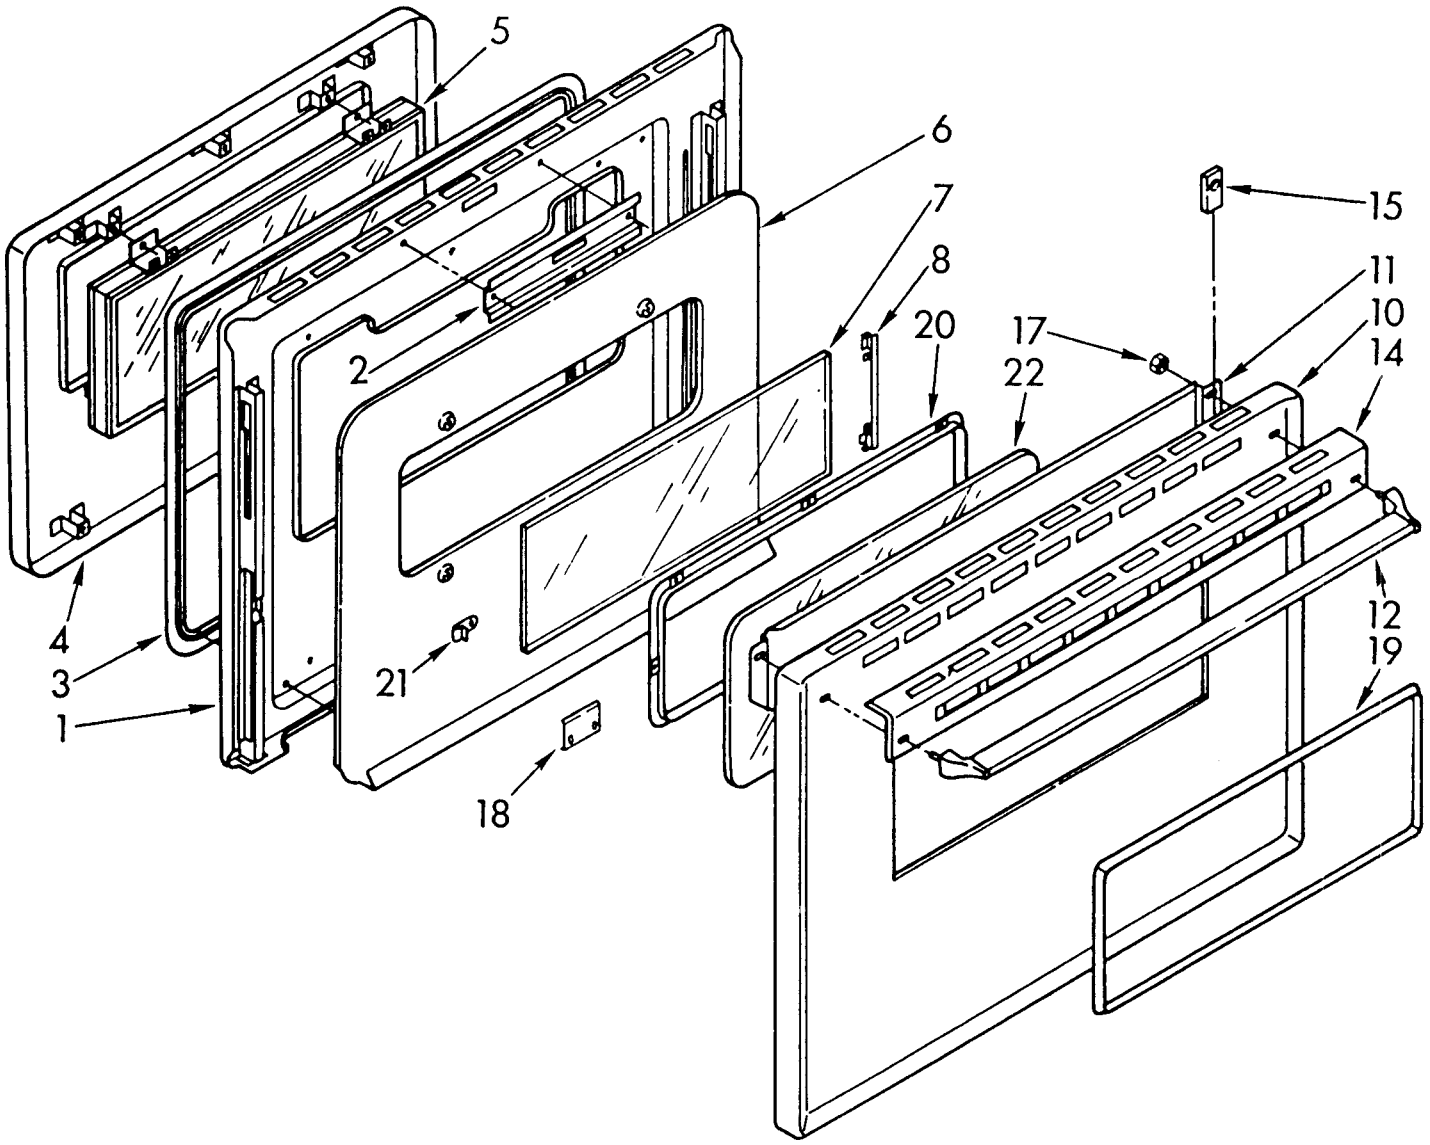

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Note:The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	327869	Liner, Door
	253549	Screw, 10A x 1/2 (6)
	338177	``J'' Clip (2)
	311056	Screw (2)
2	308033	Channel, Latch
	311054	Screw (2)
3	311904	Seal, Fiberglass
4	327898	Panel, Inner
5	309844	Window Package
	253549	Screw, 10A x 1/2 (4)
6	308021	Insulation Retainer
	253549	Screw, 10A x 1/2 (8)
7	309842	Glass (6.81" x 18.31")
8	309843	Retainer, Glass
10		Panel, Door
	307909	White
	307915	Harvest Gold
	307913	Coffee
	307911	New Avocado
	307917	Almond
	309133	Screw (2)
	254217	Screw, 10A x 3/8 (3)
	307748	Screw, 10A x 1/2 (2)
11	308011	Baffle, Top
12	311564	Handle, Door
14	311063	Trim, Panel
	311890	Clip, Top Trim
15	309845	Spacer, Sheet (2)
17	308499	Palnut (2)
18	311885	Shield (2)
	311896	Pushnut (2)
19	309173	Frame, Window
20	307792	Retainer, Glass
21	307731	Clip, Frame
22	307732	Glass, Outer
	307730	Screw (8)

OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~C
242820	Wire, Black 14 Ga. 150~C
242821	Wire, Blue 14 Ga. 150~C
242822	Wire, Brown 14 Ga. 150~C
242830	Wire, Brown 14 Ga. 200~C
242823	Wire, Green 14 Ga. 150~C
242824	Wire, Orange 14 Ga. 150~C
242829	Wire, Red 12 Ga. 150~C
242825	Wire, Red 14 Ga. 150~C
242831	Wire, Red 14 Ga. 200~C
242826	Wire, White 14 Ga. 150~C
242827	Wire, Yellow 14 Ga. 150~C
242832	Wire, Yellow 14 Ga. 200~C

REFINISHING MATERIAL

	261810	Touch-Up Self-Clean (1/2 Pt.)
	261582	Grease
INSULATION		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25!)
ACCESSORIES		
	261825	Console
	261881	Rotisserie Kit
LITERATURE PARTS		
	311951	Tech Sheet
	311433	Installation Instructions
	311412	Guide, Use & Care
	308500	Book, Cooking Guide
	980597	List, Parts